

Standard Markings

Corners:

①" = 1" Radius

③" = 3" Radius

△ = ___" Custom

Measuring and Calculating LINEAR Countertop Footage

Standard Markings

Edges:



□ = Eased Profile

▧ = Eased NO Lam

✕ = Profiled Edge

1" Radius are Included, Others May Be Additional

Eased No Lam at Range, and Refer Unless Built Up

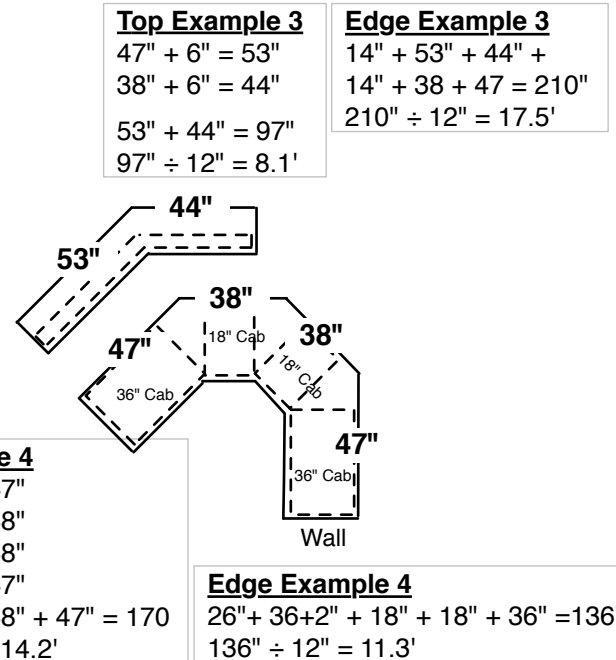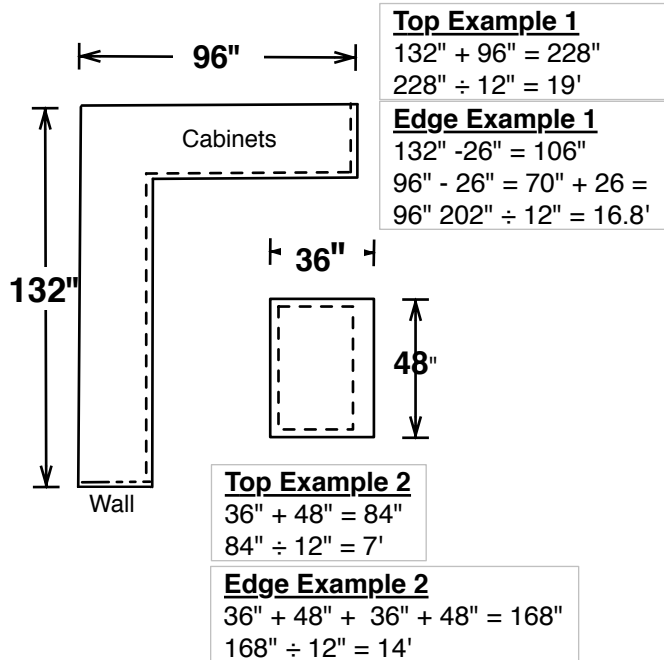

Total Linear Footage

Inches divided by 12 = Linear Footage

Countertops require overhang and scribe, so standard depths are calculated at 26" deep.

1. Use the Back Wall Dimensions for the Counter Measurements (Top Example 1)
Use the Open Finished Edge Dimensions for the Edge Measurements (Edge Example 1)

2. Counters with a depth greater than 28", add the depth to length for total Length
(See Example 2)

Measure of Cabinet Detail

3. Add 1-1/2" overhang to cabinet dimensions for open ends for top dimensions.

4. When Calculating top Footage for angled bar-tops add 6" to each wall length.
(See Example 3)

5. On each angled countertop add 10" to front edge length for back wall measurement.
(See Example 4)

Always ROUND UP final Measurements.

Totals for Top examples 1 - 4 are $19' + 7' + 8.1' + 14.2' = 48.3'$ (49' Billable)

Totals for Edge examples 1 - 4 are $16.8' + 14' + 17.5' + 11.3' = 59.6'$ (60' Billable)